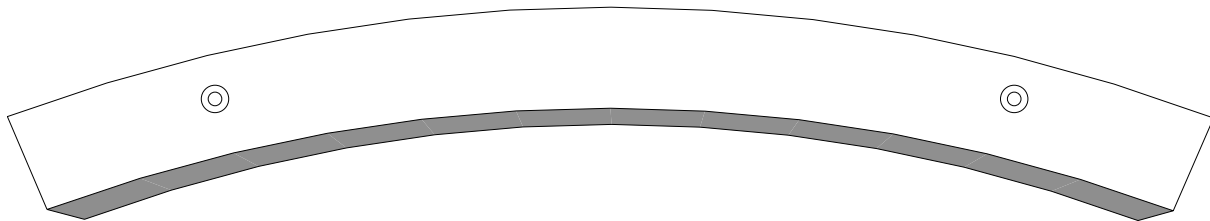


**#7219-02 FIRST PLACE POLY SHOT PUT TOE BOARD
FOR LEVEL PAD****INSTALLATION INSTRUCTIONS****IMPORTANT**

Before starting installation of this toe board, read all information contained on these pages and carefully inspect the area, including below ground, for obstructions such as electrical and/or gas lines which could cause loss of life if not properly handled.

Installation of this product should be done by an experienced contractor following all applicable codes, laws and regulations. These instructions are meant to be a guide and may need to be adapted to local requirements. M-F Athletic is not responsible for the manner in which this product is installed.

PARTS

Part #	Description	Qty
1	Toe Board	1
2	Concrete Anchors (Not Included)	2
3	Flat Washers (Not Included)	2

(Part 1) - INSTALLATION



Everything Track & Field

Diagram-1

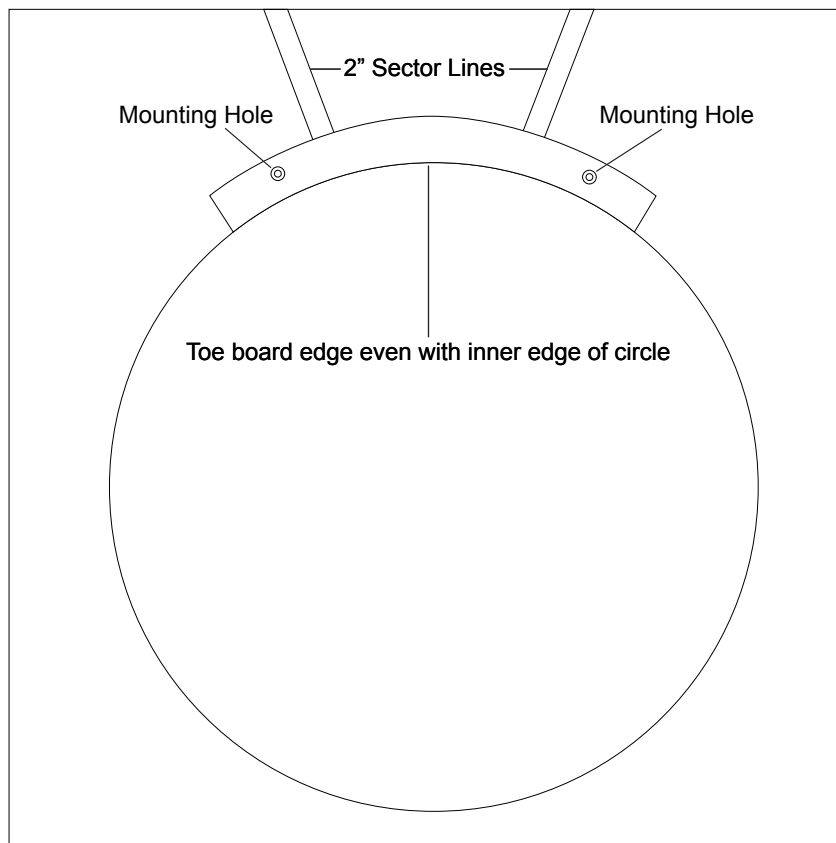


Diagram-2


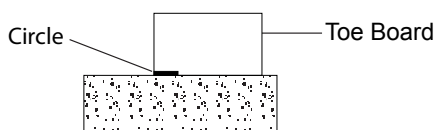


Diagram-3

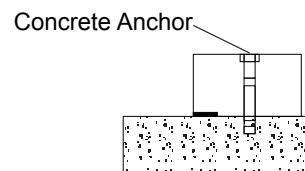

Step 1: Determine location of the toe board. The toe board should be placed on the side of the platform that faces the throwing area and centered on the sector lines. (Diagram-1)

Step 2: Place the toe board over the properly installed level shot put circle. **Note: The curved inside edge of the toe board should be flush with the inside edge of the circle.** (Diagram-2)

Step 3: Using the mounting holes near end of the toe board, make a mark in the center of each hole on the concrete pad beneath. (Diagram-1)

Step 4: Drill a hole into the concrete at each mark.

Step 5: After double checking to make sure the curved inside edge of the toe board is flush with the inside edge of the circle, install the concrete anchors in the holes on both ends. (Diagram-3) **Note: The flat washers should rest between the toe board and the head of the concrete anchors.**