

OPTIONAL BARRIER NET

Diagram-1


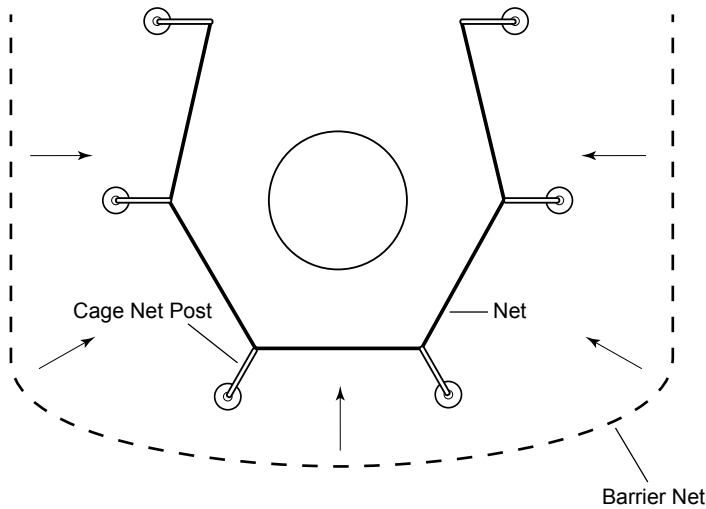


Diagram-2

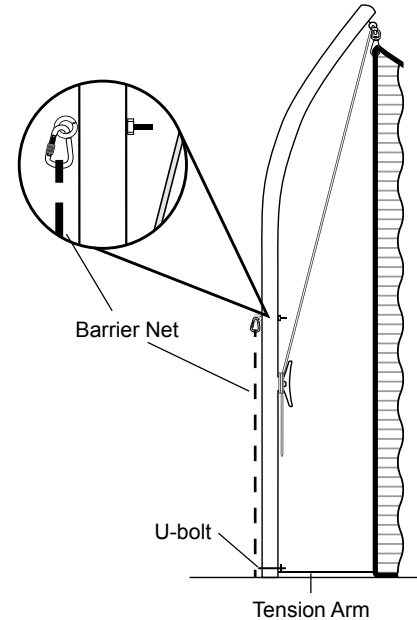

Step 1: Install eyebolts into each of the cage posts at 7' above the ground. The eye of the eyebolt should be facing away from the inside of the cage.

Step 2: Arrange the barrier net in a loose U shape on the ground on the outside of the cage posts. (Diagram-1)

Step 3: Starting at the front of the cage, attach the top of the net to the eyebolt using the net clip. (Diagram-2)

Step 4: Pull the top of the net tightly and attach to the eyebolt of the next cage post using the net clip.

Step 5: Repeat Step 4 for the remaining length of the net and cage posts.

Step 6: Unbolt the U-bolt from the Tension Arms on each post.

Step 7: Thread the bottom of the barrier net through the U-bolts and reattach the U-bolt to the Tension Arms.